 




MODEL NO.: DVX 985 HD

## DVD MICRO SYSTEM



MANUEL D'INSTRUCTIONS  
MANUALE DI ISTRUZIONI  
GEBRAUCHSANLEITUNG  
MANUAL DE INSTRUCCIONES  
HANDLEIDING  
OWNER'S MANUAL

## SAFETY



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN  
WARNING: SHOCK HAZARD-  
DO NOT OPEN



*The lightning flash with an arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.*



*The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance(servicing)instruction in the literature accompanying the appliance.*

*To prevent direct exposure to the laser beam, do not try to open the enclosure.*

### **WARNINGS:**

*To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.*

#### **DO NOT REMOVE COVER or OPEN CASING.**

*Dangerous high voltages are present inside the enclosure. Do not open the casing. Refer servicing to qualified personnel only.*

*Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.*



### **LASER:**

Type: Dual semiconductor laser GaAlAs  
Wavelength: 650nm and 780nm  
Output Power: 7mW  
Beam Divergence: 60 degrees



**INVISIBLE LASER RADIATION WHEN OPEN OR INTERLOCK  
FAILED OR DEFEATED.**

### **WARNINGS:**

*DO NOT STARE INTO BEAM. Avoid direct exposure to laser beam.*

*To prevent direct exposure to laser beam, do not try to open the enclosure.*

## IMPORTANT SAFETY INSTRUCTIONS

**CAUTION:** Read and observe all warnings and instructions in this user guide and those marked on your unit. Retain this guide for future reference.

This unit has been designed and manufactured in a way that ensures your personal safety.

Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use, and servicing. This unit does not contain any parts that can be repaired by the user.

Do not remove the casing or you may be exposed to dangerous voltage. Refer servicing to qualified service personnel only.

- Read all safety and operating instructions before operating your unit.
- Keep safety, operation, and use instructions for future reference.
- Heed all warnings on your unit and in the operating instructions.
- All operation instructions should be followed.
- Do not use this unit near water. For example, do not use this unit near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool or other areas located near water.
- Clean only with a dry cloth. Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners.
- Install in accordance with these instructions. Do not block the ventilation slots and openings in the unit, in order to ensure ventilation, and reliable operation of your unit. This will also prevent the unit from over heating.
- Do not place unit on a bed, sofa, carpet or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless correct ventilation is provided or these instructions have been adhered to.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other electronic devices (including amplifiers) that produce heat.
- Prevent the power cord from being walked on or pinched particularly at plugs and connections.
- The power cord and mains plug should remain easily accessible.
- Use only attachments or accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with this unit. Exercise caution when moving the cart/unit combination to avoid injury from tip-over.
- Unplug this unit during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when your unit has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled into your unit or objects have fallen into it, your unit has been exposed to rain or moisture, it does not operate normally, or it has been dropped.
- When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

## CONTENTS

SAFETY.....	1
IMPORTANT SAFETY INSTRUCTIONS.....	2
CONTENTS.....	3
PACKAGE .....	3
INSTALLATION .....	3
FRONT AND BACK PANEL.....	4
CONNECTIONS .....	5
REMOTE CONTROL .....	6
GETTING STARTED & BASIC SETUP .....	7-11
PLAYING DVD / CD / VCD DISCS .....	11-12
ADVANCED PLAYBACK FUNCTION .....	13-15
PLAYING MP3 / JPEG / WMA / MPEG 4 FILES .....	15-16
AUDIO CD RIPPING (ENCODING IN MP3 FORMAT)... ..	16-17
INFORMATION ON DISC COMPATIBILITY .....	17-18
TROUBLESHOOTING GUIDE .....	19
TECHNICAL SPECIFICATIONS .....	20

## PACKAGE





DVD player	A/V cable
Remote control	Instruction manual

## INSTALLATION

- Install your unit on a stable flat surface. There must be sufficient room in front of the unit for the disc tray to open and the unit should be positioned so that it can face the remote control.
- Do not expose your unit to extremes of temperature or humidity.
- Avoid standing it on a hot surface such as on top of other hot running equipment and ensure that there is adequate ventilation to the unit.


### Caution:

*Do not install this equipment in a confined space such as a book case or similar unit!*

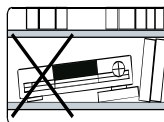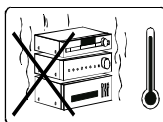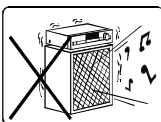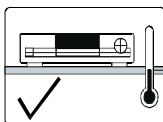


## FRONT AND BACK PANEL

### Front panel

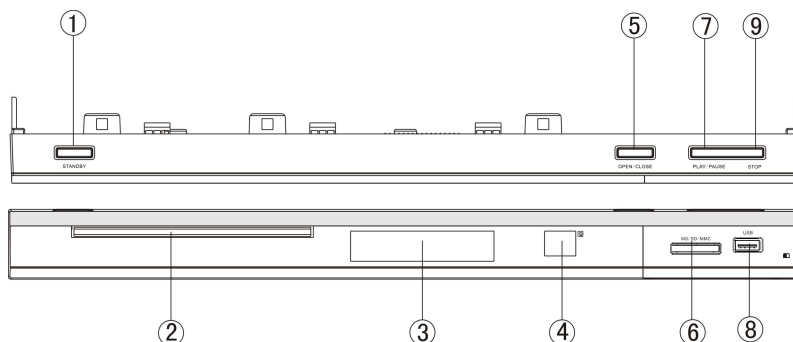

1. **STANDBY** button
2. Disc tray
3. VFD display
4. Infrared remote control sensor
5. **OPEN/CLOSE** button
6. **SD/MMC/MS** card slot
7. **PLAY/PAUSE** button
8. **USB** Port
9. **STOP** button

### Back panel

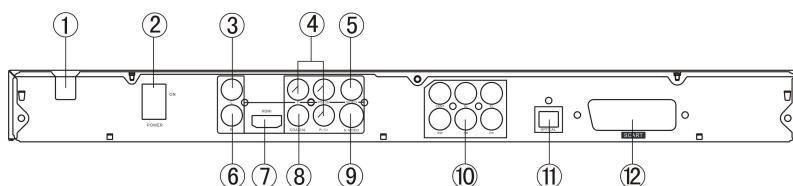

1. Power cord
2. **POWER ON/OFF** button
3. **L** (Left) audio output
4. Component video output (**Y,Pb/Cb,Pr/Cr**)
5. Composite **VIDEO** output
6. **R** (Right) audio output
7. **HDMI** output
8. Digital **COAXIAL** output
9. **S-VIDEO** output
10. 5.1 Channel digital audio output
11. Digital **OPTICAL** output
12. **SCART** output

## CONNECTIONS

### Connecting to a TV

The way in which the unit is connected and the kinds of cables used can make a noticeable difference in picture and sound quality. Before selecting one of the options, please make sure that any other equipment has the required input/output connections. Use any of the options below:

Different options for connecting your DVD player to a TV				
Output(s)	Picture quality	Cable	Cable supplied (Yes/No)	Video mode (Press the <b>V-MODE</b> button on the remote control)
<b>SCART</b>	Normal	SCART cable	No	TV-RGB
Composite <b>VIDEO</b> output + <b>L/R</b> (Left/Right) audio outputs	Normal	A/V cable (yellow+ white+red)	<b>Yes</b>	TV-RGB
<b>S-VIDEO</b> output + <b>L/R</b> (Left/Right) audio outputs	Good	S-VIDEO cable + A/V cable (white + red)	No	S-VIDEO
<b>Y, Pb/Cb, Pr/Cr</b> component video output + <b>L/R</b> (Left/Right) audio outputs	Very good	Component video + audio cable (white + red)	No	INTERLACE – YUV, P-SCAN YPBPR (for a TV with progressive scan)
<b>HDMI</b>	Excellent	HDMI cable	No	HD

#### What is HDMI (High Definition Multimedia Interface)?

This device transmits digital audio/video signals without the process of converting to an analog signal. You can get sharper digital picture by connecting your TV to the unit using an HDMI connection cable. HDMI was developed to provide HDCP technology (High Definition Content Protection). HDCP is used to protect digital content that is transmitted and received.

Because HDMI is an evolving technology, it is possible that some devices may not operate properly once they are connected to the DVD Home Theatre System.




HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.

### Connecting to amplifier

You can connect an amplifier to your DVD player in several different ways:

Different options for connecting to an amplifier			
Output	Sound quality	Cable	Cable supplied (Yes/No)
<b>L/R</b> (Left/Right) audio outputs	Normal	Audio cable (white + red)	<b>Yes (A/V cable)</b>
Digital coaxial output ( <b>COAXIAL</b> )	Very good	Coaxial audio cable	No
Digital optical output ( <b>OPTICAL</b> )	Very good	Optical cable	No

## REMOTE CONTROL

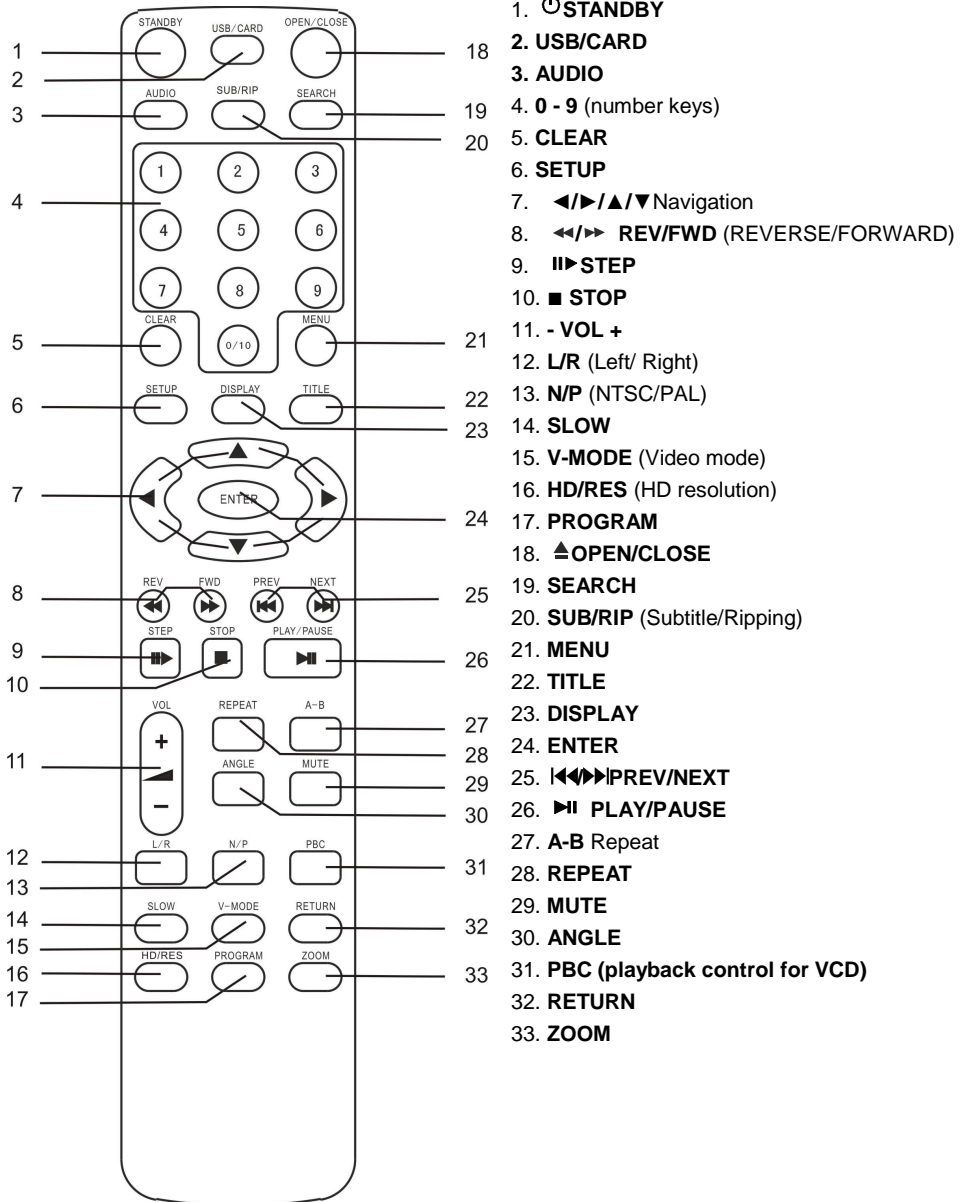

## GETTING STARTED & BASIC SETUP

### GETTING STARTED

#### Power supply for the unit

1. Carry out the connections for the unit as shown in "CONNECTIONS".
2. Insert 2 AAA batteries (supplied) into the battery compartment in the remote control, taking care to follow the correct polarities.
3. Connect the power cord to an AC mains outlet. Slide the **POWER ON/OFF** switch to **ON** and press the **STANDBY** button on the unit or on the remote control to turn on the unit.
4. Turn on the TV and set to the correct video-in source.
5. To go to the standby mode, press the **STANDBY** button on the remote control or on the unit. If the unit is not to be used for a long time, please disconnect the power cord.

#### Notes:

- The effective distance for remote control operation is about 5 meters.
- Replace the batteries when the remote control operating distance starts to reduce.
- If the remote control is not to be used for a long time, remove the batteries to avoid damage caused by battery leakage.

#### Precautions when using batteries

1. Use only the size and type of batteries specified.
2. Ensure that you follow the correct polarities marked in the battery compartment when installing the batteries. Reversed batteries may cause damage to the remote control.
3. Exhausted batteries must be removed to prevent possible battery leakage.
4. Dispose of batteries properly according to environmental regulations.

### Inserting a disc

1. Press the **OPEN/CLOSE** button on the remote or the button on the front panel to open the disc tray.
2. Insert a disc, press the **OPEN/CLOSE** button on the front panel or the button on the remote control to close the disk tray. The unit will read the disc and start to play it, or it will display a start menu.

### Inserting a USB device or an SD/MMC/MS card (in DVD mode)

- Open the compartment that allows you to access the USB port and card slot located on the right hand side of the front of the player. Insert a USB device or SD/MMC/MS card into the unit. The player will automatically play the files contained on the USB device or SD/MMC/MS card. If you have inserted a USB device and an SD/MMC/MS card, press the **USB/CARD** button on the remote control to select the source: DISC, CARD or USB.

#### Notes:

- Please ensure the USB device or SD/MMC/MS card has been inserted.
- This unit cannot support NTFS format. If the device does not work on it, please check the device file system and format it with FAT or FAT32.


Although you can watch a movie immediately, to get the best from this unit, it is suggested that you proceed with the Basic Setup first.

### BASIC SETUP

Press the **STANDBY** button to turn on the unit and press the **SETUP** button in when no disc has been inserted or in stop No Disc or STOP mode to enter the SYSTEM SETUP menu.

#### Basic Operation

1. Press **◀** or **▶** to navigate to select one of these the menus below (icons at the top of the display):

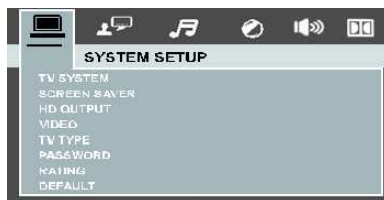



- SYSTEM SETUP
  - LANGUAGE SETUP
  - AUDIO SETUP
  - VIDEO SETUP
  - SPEAKER SETUP
  - DIGITAL SETUP
2. Press ▲ or ▼ to select different settings in a menu. Press ► or ENTER to active the setting.
  3. Press ▲ or ▼ to select a new setting, then press ENTER to confirm the new setting.
  4. Repeat steps 1 to 3 to change any settings.
  5. Press the **SETUP** button to exit setup.
- For more details, please refer to the next chapters.

## 1. SYSTEM SETUP

### 1.1 “TV SYSTEM”

This player supports two different TV systems, including NTSC or PAL. The setting of the unit can be changed to match your TV.

**“NTSC”**: Select this system if your television supports the NTSC color system used in North America.

**“PAL”**: Select this system if your television supports the PAL color system used in Europe and Asia.

**AUTO**: Select this option to automatically switch to PAL or NTSC mode according to the disc inserted.

**Note**: If you use the HDMI output and the disc's color system is different to the TV system selected, the image may flicker. Select the “AUTO” option to adjust it.

**Note**: You can also use the **N/P** button on the remote control to select the TV system in STOP mode.

### 1.2 “SCREEN SAVER”

Use this setting to turn the screen saver option on or off. If you turn the screen saver on, the screen saver image appears when you leave the player in pause or stop mode more than 3 minutes. It protects the television screen from being damaged.

**On**: To turn screen saver on.


**Off**: To turn screen saver off.

### 1.3 “HDMI OUTPUT”

This function allows the user to select the screen resolution for HDMI output.

**Note**:

- *If your TV or monitor does not support HDCP, a blue screen without a picture appears when playing DVD discs which are protected by copyright.*
- *The HDMI output options depend on the TV system selected (PAL or NTSC).*
- *See your TV instruction manual for more information on how to select the video input source.*
- *Please make sure your HD TV supports the high resolution selected.*
- *You can also easily change the resolution by pressing the HD/RES button on the remote control repeatedly.*

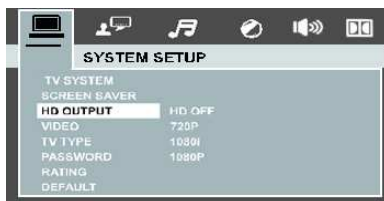

### 1.4 “VIDEO”

Select the video output mode. Please ensure that you have connected the corresponding video source. In order to do this, refer to “CONNECTIONS”.

**Interlace-YUV**: Select this option when the player is connected to a TV via a Y, Cb, Cr input.

**TV-RGB**: Select this option when the player is connected to a TV via a composite VIDEO or SCART input.

**P-SCAN YPBPR**: Select this option when the player is connected to a TV with a progressive scan Y,

Pb, Pr input.

**S-VIDEO:** Select this option when your player is connected to a TV via an S-VIDEO input.

Note: You can also use the **V-MODE** button on the remote control to select the video output mode in STOP mode.

## 1.5 “TV TYPE”

**“4:3 PS”** Select this format if the unit is connected to a normal TV. The left and right edges of the wide screen images are cut so that the image can be displayed in full screen.

**“4:3 LB”** Select this format when the unit is connected to a normal TV. Wide screen images are shown on screen, with black bands on the top and bottom.

**“16:9”** Select this format when the unit is connected to a widescreen TV.

### Notes:

- Some discs may not be able to play according to your selection, due to the format that has been recorded onto a DVD disc.
- A disc recorded in 4:3 format will only play in 4:3 format.
- The TV format should correspond to your TV.

## 1.6 “PASSWORD” & “RATING”

Many DVD movie discs contain Motion Picture Association rating codes. This DVD Player will recognize the codes on these discs, providing a method to prevent children from viewing films which are not suitable for them.

**1 (Kid safe):** Suitable for all audiences

**2 (G):** Suitable for general audiences

**3 (PG):** Parental guidance suggested

**4 (PG-13):** Parental guidance suggested, unsuitable for children under 13

**5 (PG-R):** Parental guidance recommended - brief scenes containing mature language or situations

**6 (R):** Restricted - violence, adult language and situations unsuitable for young viewers

**7 (NC 17):** Adult theme or content, not suitable for children under 17

**8 (Adult):** Adult themes, language and nudity. Select this level of control to switch off parental control.

1. Press **▲** or **▼** to highlight “Rating”, then press **►**. Select a parental control level and press **ENTER**.
2. Press **▲** or **▼** to select Password and press **►**. Use the number keys (0-9) to enter the four-digit password (the default password is “0000”) and press **ENTER** to confirm. The system is locked again, which means that the parental control function is switched on.
3. In the SYSTEM SETUP menu, press **▲** or **▼** to highlight “Password” and press **►**. Use the number keys (0-9) to enter the four-digit password (the default password is “0000”) and press **ENTER** to confirm. The system is unlocked, which means that you can adjust the setup for parental control. If a mistake is made before pressing **ENTER**, press the **CLEAR** button and enter the 4-digit password again. DVD discs that are rated above the selected level will not play. To change the password, first enter the old password, then enter the new password.

 Indicates Parental lock is NOT active.  The Parental lock is active.

### Notes:

- The rating levels are only functional when the parental lock is active.
- The rating levels can only be changed when the parental lock is not active.

## 1.7 “DEFAULT”

This option allows you to restore the default settings.

## 2.LANGUAGE SETUP

You can select different languages for the setup menu. You can also select different languages for the audio, subtitles, and disc menu recorded on the DVD.



### 2.1 “OSD LANGUAGE”

Select the on screen display language.

### 2.2 “AUDIO LANG”

Select the audio language.

### 2.3 “SUBTITLE LANG”

Select the language for the subtitles displayed on the TV screen.

### 2.4 “MENU LANG”

Select the disc menu language.

### 2.5 “MPEG4 SUBTITLE”

Select the language for the MPEG4 subtitles.

## 3.AUDIO SETUP

### 3.1 “AUDIO OUT”

If an amplifier is connected to the unit's “COAXIAL” or “OPTICAL” socket, the following settings can be selected.

“**SPDIF/OFF**”: The audio signal is not transmitted via the “COAXIAL”, “OPTICAL” or “HDMI” output. Select this option when no digital output is used.

“**SPDIF/RAW**”: Dolby Digital signals are fed unaltered to the digital output. Generally, this setting is used with a digital 5.1 channel receiver.

“**SPDIF/PCM**”: Dolby Digital and MPEG 2 multi-channel signals are converted to PCM (Pulse Code Modulation). This setting is suitable for amplifiers or receivers without digital multi-channel sound decoders.

**Note:**

- *This unit cannot support DTS decode.*



### 3.2 “GM5”

This option allows you to convert a 2 channel signal into a 5 channel sound with sound effects: **CINEMA**, **SONG** or **OFF** (function disabled).

### 1.3 “KEY”

Use the ▲ or ▼ button to adjust the key tone.

## 4.VIDEO SETUP

Use the ▲ or ▼ button to adjust the **BRIGHTNESS**, **CONTRAST**, **HUE**, **SATURATION** and **SHARPNESS** of the video output quality.

## 5.SPEAKER SETUP

### 5.1 “DOWNMIX”

**LT/RT**: This option allows you to listen to the soundtrack as it would sound in a movie theatre, if the original movie was recorded in the Pro Logic Dolby Digital format.

**STEREO**: When 2-channel sound is played, select this option to obtain stereo sound.

**VSS**: When 5.1-channel sound is played, the surround sound effect will be heard from the main soundtrack.

**5.1 CH**: The 5.1-channel sound is output.

### 5.2 “SUBWOOFER”

**OFF**: The subwoofer output is disabled.

**ON**: The subwoofer output is enabled.

### 5.3 “CENTER DELAY” / “REAR DELAY”

These options allow you to adjust the sound signal delay of the center and rear speakers.

### 5.4 “FRONT”/ “CENTER”/“REAR”

**LARGE:** Select this option for bass and treble audio signals to be output to the speakers that can handle wide range sound frequencies.

**SMALL:** Select this option so that only treble audio signals are sent to the speakers that can handle narrow range frequencies.

**OFF** (for center/ rear speakers only): Select this option to disable the speaker sound output.

## 6.DIGITAL SETUP

### 6.1 “OP MODE” (dynamic compression)

**LINE OUT:** This option allows the user to adjust the dynamic compression in order to limit variations in volume to a level that is suitable for use at night.

**RF REMOD:** This option switches off dynamic compression for daytime use (the volume variations are set to normal).

### 6.2 “DYNAMIC RANGE”

Select “LINE OUT” in OP MODE to adjust the compression rate. Select “FULL” to limit the volume variations as much as possible. Select “OFF” to switch off the dynamic compression function.

**NOTE:** This option can be adjusted when the DOWNMIX setting is OFF.

### 6.3 “DUAL MODE”

Select this sub-menu to setup the L and R output modes: STEREO, MONO L, MONO R, and MIX MONO.

## PLAYING DVD / CD / VCD DISCS

### 1. ▲ (Open / Close)

- Press to open the disc tray.

**Note:** Load the disc on the disc tray with disc label facing upwards.

- Press this button again to close the disk tray. The unit will start playback automatically.

### 2. ►|| (PLAY/PAUSE)

- Press to start playback. Press it again to pause playback.

### 3. ||► STEP (Frame-by-Frame Advance)

The image can be advanced frame by frame.

- For DVD / VCD playback, press ||►STEP to advance frame by frame in STEP mode. Press ►|| PLAY/PAUSE to resume the normal playback.

### 4. SLOW

Press the **SLOW** button to start forward/backward slow motion play in the following sequence: 1/2, 1/3, 1/4, 1/5, 1/6, 1/7. Press the ►|| **PLAY/PAUSE** button to resume normal playback.

**Note:** Slow motion is not applicable to CD playback.

### 5. ◀◀/▶▶ (forward/backward search)

Press the ◀◀/▶▶ buttons to perform a fast forward or backward search. Press the ►|| PLAY/PAUSE button to resume normal playback. Each time these buttons are pressed, the playback speed will be adjusted in the following sequence: x2, x4, x8, x20.

### 6. ||◀◀ (Skip Forward/Backward)

When a disc is playing, you can skip backward/forward to the next track or chapter.

- Press the ||◀ button to skip to the beginning of the previous chapter or track.

- Press the **▶▶** button to skip to the beginning of the next chapter or track. Press the **▶||** **PLAY/PAUSE** button to resume normal playback. Each time these buttons are pressed, the playback speed will be adjusted in the following sequence: x2, x4, x8, x20. • For audio CD discs, use the number buttons (**0 - 9** on the remote control only) to directly jump to a track number.

## 7. ■ (Stop)

- Press **■** once to stop the current playback instantly and enter the “Resume Play” mode. Press **▶||** **PLAY/PAUSE** to resume playback from the point where the disc was stopped.
- Press **■** twice to stop playback completely. It is now impossible to resume playback from the place where playback was stopped. Press **▶||** **PLAY/PAUSE** again to start playback from the beginning of the disc.

## 8. MENU

- Press to display the disc menu.

### Notes:

*This button has no function during playback of an audio CD. For VCDs, this function is only available in PBC ON mode.*

## 9. TITLE

- Press to display the title menu if available on the disc (DVD only).

## 10. ZOOM

The picture size can be magnified or reduced during playback.

- When a disc is playing, press the **ZOOM** button. Each time the **ZOOM** button is pressed, the ZOOM settings will be changed as follows:  
ZOOM 2 --> ZOOM 3 --> ZOOM 4 --> ZOOM 1/2 --> ZOOM 1/3--> ZOOM 1/4 --> ZOOM: OFF
- While an image is magnified, use the **▲**, **▼**, **◀** and **▶** keys to pan the image for viewing.
- To return to the normal view, press the **ZOOM** key until the message ZOOM: OFF is shown. The screen will return to normal.

## 11. ANGLE

### ANGLE (change the viewing angle on a DVD)

Different viewing angles can be selected when playing a DVD video disc that contains scenes recorded from multiple angles.

- Press **ANGLE** repeatedly to select different viewing angles if available on the disc.

## 12. AUDIO (select the subtitle languages available on the disc)

 : [ 1 ]  [ 2CH ]

During DVD playback, different audio languages can be selected.

- When a disc is playing, press **AUDIO** to show the current audio language.
- Press repeatedly to select the desired audio language.

### Notes:

- For VCD, audio output (STEREO, Mono L, Mono R, MIX MONO) can be selected using the **L/R** button.
- There will be no sound outputs when a DTS audio format is selected if a DTS disc is playing.

## 13. SUBTITLE

### (To select the Subtitle Languages available on the disc)

 : [ 3 ENGLISH ]

During playback, you can change the subtitle language or disable the subtitle function.

- While a disc is playing, press **SUB/RIP** to show the current subtitle playback language.
- Press repeatedly to select the desired subtitle language.

### Notes:

- This function can only be used for discs on which different subtitle languages have been recorded.
- The number of languages recorded may be different depending on the disc.

## ADVANCED PLAYBACK FUNCTIONS

### 1. DISPLAY function

While the disc is playing, press **DISPLAY** to display playback information available, depending on the disc.

#### DVD:

- Press **DISPLAY** once to display the playback information and playing time of the current chapter.
- Press **DISPLAY** twice to display more playback information: audio language and output mode, subtitle and angle.

#### CD/VCD:

- Press **DISPLAY** once to display the playback information and playing time of the current track.

#### 1.1 TT (Title Info)

- Displays the title number being played and the total number of titles recorded on the disc.

#### 1.2 CH (Chapter Info)

- Displays the chapter number being played and the total number of chapters recorded on the disc.

#### 1.3 Elapsed time

- Displays the elapsed time from the beginning of the title/chapter/disc/track being played.

**Note:** If there is a “-” displayed in the front of the time, this is the remaining time of current title/chapter/track.

#### 1.4 Audio

- Displays the audio language and audio output mode currently selected.

#### 1.5 Subtitle

- Displays the subtitle language currently selected.

#### 1.6 Angle

- Displays the viewing angle currently selected. When a disc without multi-angle is played, OFF is displayed.

#### 1.7 TRK (Track Info)

- Displays the Track Number being played and the total number of tracks recorded on the disc.


#### 1.8 Mute off Icon

- This icon will be displayed when the mute function is switched off.

#### 1.9 Repeat Mode


- Displays the current repeat mode.

**Note:** After checking the settings, press **DISPLAY** again to make the information disappear.

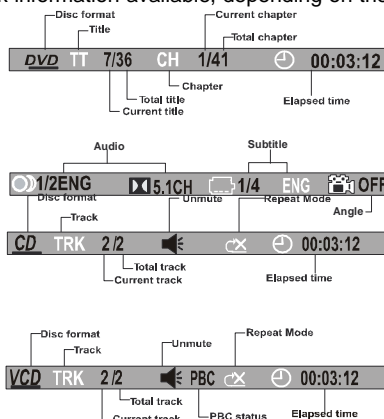

## 2. SEARCH function

 This function allows you to select any point on the disc and to start playback from this point.



### 2.1 Selecting a Specific title/chapter for DVD or track for CD/VCD

You can select any specific title/chapter/track and start playback from this point by directly selecting it.

- Press **SEARCH**.
- Press **◀** or **▶** to highlight the title / chapter / track field and press the corresponding number key **0 - 9**.
- Press **ENTER** to confirm. The unit will then start playback from the selected position.

**Note:** Press **CLEAR** to cancel a selection.

## 2.2 Locating a specific time

A specific time can be selected by directly entering the time (hours, minutes, seconds).

- Press **SEARCH**.
- Press ◀ or ▶ to highlight the time.
- Using the number keys directly enter the time when playback should start.
  - The first two digits are for the hours.
  - The next two digits are for the minutes.
  - The last two digits are for the seconds.
- After entering the time, press **ENTER** to confirm. The unit will then start playback from the selected time.

Notes:

- Some discs may not allow use of this function.
- Some scenes may not be located as precisely as specified.
- This method for accessing a specific location is available only within the current title of the DVD disc or current track of the CD.
- For VCDs, this function only works if PBC is off.
- Press **CLEAR** to delete any mistakes.


## 3.Programming playback


Contents of the disc can be played in a selected order.

- Press the **PROGRAM** button.

Note: During VCD/SVCD playback, the function is only available when PBC is OFF.


### 3.1 DVD Programming

- Enter the title numbers in  (2 digit format, e.g. 01). Use the ◀ / ▶ buttons to highlight the chapter number and enter the chapter numbers in two digits.
- Use ◀, ▶, ▲ or ▼ to move to another field.
- Repeat the above steps for the next titles/chapters.
- Press **▶|| PLAY/PAUSE** or highlight **PLAY** on the screen and press **ENTER** to start the programmed playback.

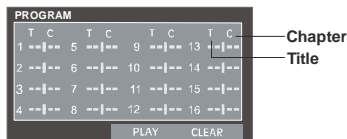

### 3.2 CD/VCD/SVCD Programming

- Enter the track numbers of your choice (two digits).
- Refer to the previous section to program the tracks of your choice.

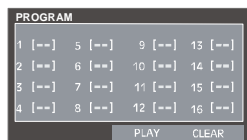

### 3.3 Clear the Programs

- Highlight the current field on the screen and press **CLEAR** to delete the program.

Note:

- Highlight "CLEAR" on the PROG screen and press **ENTER** to delete all programs.

## 4. Repeat playback

A specific title, chapter or track can be played repeatedly.

Note: During VCD / SVCD playback, repeat playback is only available when PBC is OFF.

### 4.1 Repeating a Title/Chapter/Track/All disc

- Press the **REPEAT** button

For DVDs : “OFF”> “Chapter” > “Title”

For CD /VCD/SVCD Disc: “OFF”> “REP 1” > “REP All”

For MP3 / JPEG / WMA files: “OFF”>”REP 1”>”REP DIR”>”REP All”

## 4.2 Repeating a Specific Section

A-B repeat playback allows a specific section to be repeated.

- While the disc is playing, press the **A-B** button to set the beginning of the section (point A) to be played repeatedly. **REPEAT A-**
- Press the **A-B** button again to set the end of the section (point B) to be played repeatedly. **REPEAT A-B**
- The unit will then immediately begin replaying the selection ( A to B) repeatedly.
- Press the **A-B** button again to clear the programmed repeat playback and return to normal playback.

*Note:*

- *The A-B repeat function can only be used within the same title or track. If points A and B are defined in different titles or tracks, A-B repeat is cancelled.* **A-B CANCEL**

## 5.VCD/SVCD playback control

While a VCD / SVCD is playing, press **PBC** repeatedly to switch PBC (Playback Control) on or off.

- If PBC ON is selected, the disc menu (if available) will appear on the TV. Use **◀◀▶▶** or the number keys (**0-9**) to select an option.

## PLAYING MP3 / JPEG / WMA / MPEG 4 FILES

### 1. **▶|| (PLAY/PAUSE)**

- Press to start playback. Press it again to pause playback.

### 2. **◀◀▶▶ (Skip)**

- Press to skip to the next/previous track or picture.

### 3. **■ (Stop)**

- Press to stop playback and display the selection menu (JPEG and movie files).

*Note: Press **▶|| PLAY/PAUSE** to play from the beginning.*

### 4. **ZOOM**

- Press to zoom into the picture when playing JPEG or MPEG4 files.

### 5. **Flipping and rotating a still picture (JPEG)**

- Press the navigation keys(**▲, ▼, ◀, ▶**) to flip or rotate a still picture.

**▲**: flip the picture vertically.

**▼**: flip the picture horizontally.

**◀**: rotate the picture 90° counter-clockwise.

**▶**: rotate the picture 90° clockwise.

### 6. **Audio (MPEG4)**

- During playback, press **AUDIO** to show the current playback audio language.
- Press repeatedly to select the desired audio language.

### 7. **Subtitle (MPEG4)**

- The unit only can support the MPEG4 files with external subtitles.

- To use the subtitle function:


- 1). Download or create the subtitle file with the specified format, e.g. Subrip (\*.srt), MicroDVD (\*.sub), SAMI Captioning (\*.smi), SubViewer 2.0 (\*.sub).



- 2). Name the MPEG 4 movie and subtitle file with the same characters (e.g. abc.avi and abc.srt). Burn them on to a CD disc or copy them into the USB, SD/MMC/MS device.
- 3). Insert the disc or USB, SD/MMC/MS device and select the MPEG4 file to play, then press **SUB/RIP** to turn the subtitles on or off.

## Selection Menu

The selection menu will appear when MP3/WMA/JPEG/MPEG4 files are read. All the folders will appear on the left hand menu and will be numbered in ascending order. When one of the folders is highlighted, all the contents of the folder will be displayed on the right side of the menu. You can display one type of file (music, pictures or films). Use the navigation keys to highlight the icon corresponding to the type of file that you would like to select (music, image or film). These icons can be found at the bottom of selection menu. Press **ENTER** to confirm. Then select the files and press **ENTER** or **▶ || PLAY/PAUSE** to start playback.

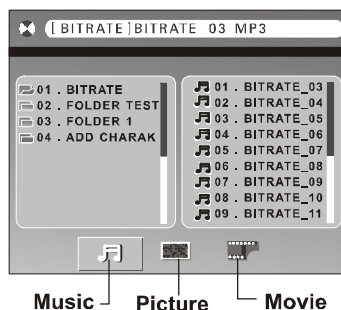

## [MUSIC] --- MP3 / WMA files

The unit will play the MP3 / WMA file currently selected. It will then play all the files in the sub-folders contained within the current folder. After that, the unit will play the remaining folders on the disc.

## [PICTURE] --- JPEG files

Press **▶ || PLAY/PAUSE**, and the unit will start the slideshow from the JPEG file currently selected. Then you can zoom in on or rotate the displayed pictures. You can also select a folder and display all the files in that folder. Select the folder of your choice and press the **▶ || PLAY/PAUSE** button.

## [MOVIE] --- MPEG 4 files

The unit will read the file currently selected.

Notes:

- WMA, MP3, JPEG and MPEG4 files cannot be played simultaneously.
- The highlighted icon at the bottom of the menu indicates what kind of file is playing.

## AUDIO CD RIPPING (ENCODING IN MP3 FORMAT)

With this player, you can record your favorite CD music to a USB device or SD/MMC/MS card with MP3 format.

1. Check that the USB device or SD/MMC/MS card has been properly connected.
2. Insert a CD disc that contains the music you want to record into the disc tray.
3. Use the **USB/CARD** button on the remote control to select the disc mode.
4. Press the **SUB/RIP** button on the remote control, the CD RIPPING menu is then displayed on the screen.

- In the **OPTIONS** menu, use **▲, ▼, ◀** or **▶** to choose an option and then press **ENTER** to change the settings.

## ENCODE OPTIONS

**SPEED:** Set the encoding speed between 1X and 4X.

**BITRATE:** You can choose one of the following bitrates:

“128KBPS”, “160KBPS”, “192KBPS”, “256KBPS” and “320KBPS”. The sound quality of the MP3 files depends on the compression rate that you choose. In order to obtain audio quality similar to that of a CD, use a sampling rate between 128 Kbps and 160 Kbps. Use of a higher rate, such as 192 Kbps or more, rarely gives better quality. Conversely, files with a decompression rate lower than 128 Kbps are not of sufficient quality.

## FILE OPTIONS

**CREATE ID3 TAG:** This option allows you to create ID3 tags, if available on the disc.

RIP CD-UNKNOWN ALBUM	
<div>▶ <b>OPTIONS</b></div> <div>TRACKS</div> <div>START</div> <div>QUIT</div>	
ENCODER OPTIONS	
SPEED	1X
BITRATE	128KBPS
FILE OPTIONS	
CREATE ID3 TAG	<input checked="" type="checkbox"/>
CREATE PLAYLIST	<input checked="" type="checkbox"/>
STORAGE OPTIONS	
STORAGE	USB <input checked="" type="checkbox"/>

**CREATE PLAYLIST:** This option allows you to create a playlist under the name “Unknown Album.m3u”. This list includes all the recorded tracks and can be played on a PC.

**STORAGE OPTIONS**

This option allows you to select the source on which you would like to record the tracks: USB or SD/MMC/MC.

- In the **TRACKS** menu, the default is to record all the tracks that have a “cross” mark in the box next to them. You can use You can uncheck all the tracks or several tracks of your choice. In order to do this, ▲ or ▼ to select the track that you do not want to record and then press **ENTER** to confirm deletion.
- In the **START** menu, you can check the total tracks, total time and total size that you want to record.

RIP CD-UNKNOWN ALBUM

OPTIONS	<input checked="" type="checkbox"/>	TRK	TITLE	LENGTH
	<input checked="" type="checkbox"/>	1	TRACK 1	3:10
	<input checked="" type="checkbox"/>	2	TRACK 2	2:49
	<input checked="" type="checkbox"/>	3	TRACK 3	4:06
	<input checked="" type="checkbox"/>	4	TRACK 4	2:59
	<input checked="" type="checkbox"/>	5	TRACK 5	3:40
	<input checked="" type="checkbox"/>	6	TRACK 6	2:55

▶ TRACKS

START

QUIT

RIP CD-UNKNOWN ALBUM

OPTIONS	SUMMARY
	TOTAL TRACKS 16
	TOTAL TIME 56:16
	TOTAL SIZE 128.7MB

▶ TRACKS

START

QUIT

PRESS ENTER TO BEGIN

Press **ENTER** to start playing and recording the selected tracks.

--> The track progress bar and total progress bar will display on the screen indicating the recording progress.

--> During recording, highlight “**CHANGE SPEED**” and press **ENTER** to change the encoding speed. If you select the encoding speed 4X, the sound will be muted.

--> Highlight “**CANCEL**” and press “**OK**” to stop recording.

--> **FULL**” appears if the storage space on the storage device is full. When recording is complete, press **ENTER** to confirm.

- Highlight **QUIT** and press **ENTER** to exit the CD RIPPING menu.
- All the tracks are saved in the folder named “Unknown Album”.

**Notes:**

- If “**ERROR**” appears during CD ripping, or the MP3 files cannot be read after ripping, please format the USB device or SD/MMC/MS card in FAT or FAT32 and then start the ripping again.

TRACK 1

TRACK PROGRESS

TOTAL PROGRESS

SPEED: 1X

CHANGE SPEED


CANCEL

**INFORMATION ON DISC COMPATIBILITY**

**Disc formats supported by this DVD player:**

DISC TYPE	CONTENTS	SIZE	MAXIMUM TIME
DVD	Audio + Video	12 cm	133 min (SS-SL)
DVD-R			242 min (SS-DL)
DVD+R			266 min (DS-SL)
DVD-RW			484 min (DS-DL)
DVD+RW			
SVCD	Audio + Video	12 cm	45 min
VCD	Audio + Video	12 cm	74 min
CD	Audio	12 cm	74 min
HD-CD	Audio	12 cm	74 min
MP3/JPEG	Audio / Image (high resolution despite compression)	12 cm	600 min

- The characteristics of some DVD discs are specified by the software maker. Please refer to the disc instruction manual for more information.
  - This DVD player will play most recordable (CD-R) OR re-writable (CD-RW) CDs, and most recordable (DVD-R, DVD+R) or re-writable (DVD-RW, DVD+RW) DVDs. In some cases, discs created by a computer require finalization of the disc to enable playback.
- Discs created by some computers and/or software programs may not be compatible. This will affect playback but is not the result of a defect in this device.

**PLAYER ZONE:**  The zone this player can play is discs from zone "2". This indication is marked on the DVD disc label.

### **Disc terminology:**

#### **Title:**

Generally, pictures or music compressed on a DVD are divided into several sections called "titles".

#### **Chapter:**

This is a smaller segment of picture or music within a DVD under a title. A title is comprised of one or more chapters, each numbered for easy searching. Some discs may not have chapters.

#### **Track:**

This is a segment of a picture or music on a CD or other disc. Each track is numbered for easy searching.

### **Care of Disc**

Video discs contain high-density compressed data that needs careful handling.

1. Hold the disc on the outer edge and/or the center spindle hole. Do not touch the disc surface.



2. Do not bend or press the disc.

3. Do not expose the disc to direct sunlight or heating sources. Store discs vertically in a cabinet, in dry conditions.

Prevent exposure to:

Direct sunlight

Heat or exhaust from a heating device

Extreme humidity

Clean the disc surface with a soft, dry cleaning cloth. Wipe the disc surface gently, from the center towards the outer edge.

Do not apply thinner, alcohol, chemical solvent, or sprays to discs when cleaning them. Such cleaning fluids will permanently damage the disc surface.

### **NO POWER**

- Check that the player is switched on.
- Check if the power cord is properly connected.

### **NO PICTURE**

- Check if the TV is switched on.
- Check if the correct AV input is selected on the TV (refer to the TV manual for more details).
- Check the video connection between the player and TV.

### **NO PICTURE AT HDMI OUTPUT.**

- Check if the TV HDMI input is selected.
- Check if the HDMI resolution selected corresponds to resolution of your HD TV.
- Check if your HD TV supports HDCP.

### **BAD QUALITY PICTURE**

- Check the disc for fingerprints and clean with soft cloth, wiping from the center to the edge.
- A small amount of picture distortion may sometimes appear-this is not a malfunction.
- Check if the disc format is compatible with the TV (PAL/NTSC).

### **BLACK AND WHITE PICTURE**

- Check if the disc format is compatible with the TV (PAL/NTSC).
- Check that DVD player is not connected through VCR.

### **PICTURE INTERFERENCE**

- Relocate the unit further away from possible sources of interference or emission (e.g. radio, power amplifier, radiator etc.).

## **TROUBLESHOOTING GUIDE**

If it appears that the unit is faulty, first consult this checklist. It may be that something simple has been overlooked.

**Note:** *Under no circumstances should you try to repair the unit yourself as this will void the warranty. Only qualified service personnel should remove the cover or service this unit.*

### **THE PLAYER DOES NOT RESPOND TO THE REMOTE CONTROL**

- Aim the remote control directly at the sensor on the front of the player.
- Avoid all obstacles which may interfere with the transmission path.
- Inspect and/or replace the batteries.

### **NO SOUND FROM THE SPEAKERS**

- Check the speaker cable connections.
- Check that the volume control is NOT at minimum setting.
- Check that the mute function is not activated.
- Check if the disc is defective by trying another disc.

### **NO SOUND**

- Check audio connections.
- If using a Hi-Fi amplifier, try another sound source.
- Clean the disc.
- Check if the disc is defective by trying another disc.

### **NO AUDIO AT DIGITAL OUTPUT**

- Check the digital connections.
- Check the audio setup menu to make sure that the digital output is correctly set.

## TECHNICAL SPECIFICATIONS

Power supply	AC 230V ~ 50 Hz
Power consumption	20 Watts
Discs and files supported	DVD-Video, DVD+R/RW DVD-R/RW, CD-DA, CD-R/RW, MP3, JPEG, VCD2.0, Full compatibility with MPEG 4, Xvid (.avi)
TV system	PAL/NTSC
Video out	Composite video 1.0 Vp-p 75 Ohm
Audio out	Analog audio out 2. 0V (RMS) / 10K Ohm load
Frequency response	20Hz -20KHz +/- 3dB
Output terminals	Audio/video (composite) output x 1 SCART output x 1 S-VIDEO output x 1 Y Pb/Cb, Pr/Cr component video output x 1 5.1 Channel audio output (left front/back, right front/back, subwoofer) x 1 Digital coaxial output x 1 Optical output x 1 HDMI output x 1 USB Port Type
Maximum Capacity supported by the USB Port	8 GB
Card slot type	SD/MMC/MS
Maximum capacity supported by the card slot	4 GB Some external hard disks may not be supported (particularly if they are not in FAT32 format). Detecting scanning the hard disk may sometimes

take a few minutes.

Dimension

Player: 430 (L) X 210 (W) X 38 (H) mm

Weight (full package)

Approx 2.5 Kg

**Note:** *Due to continuing improvements, these technical specifications are subject to change without notice.*



If at any time in the future you should need to dispose of this product please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice (Waste Electrical and Electronic Equipment Directive).